ENGLISH

User Guide



Depository Safewith Combination Lock

Model 5911

Read this manual carefully and never store it inside the safe!

Index

Welcome / Package Contents	Page 1
Unlock & Open Your Safe / Closing & Locking Your Safe	Page 2
Anchoring Your Safe	Page 3
Using The Depository Door / Care and Maintenance	Page 4
Consumer Assistance	Page 5
Recovering Lost Combination / Safe Identification Record	Page 6
Notes	Page 7
Limited Warranty	Back Cover

For Your Protection

- Do not remove the Serial Number tag from the safe.
- Record all Safe Identification Numbers on Safe Identification Record (page 6).
- Save this manual and NEVER keep it inside the safe.

WELCOME

Your Honeywell Steel Depository Safe will provide years of safe and secure protection for your currency and check deposits, important documents and other personal items. All Honeywell safes are designed and built using the highest manufacturing standards to ensure maximum user satisfaction under a variety of conditions. With proper care, your Honeywell safe will provide "Peace of Mind" for many years to come.

Thank you and enjoy!

PACKAGE CONTENTS


The following list outlines the items and quantities of each included with your new safe. Please carefully check the list to confirm all items have been received. If any item is missing, please contact Consumer Assistance (See page 5 for contact information).

5911 Depository Safe (1 ea.)

User Guide (1 ea.)

Floor Mat (1ea.)

Mounting Hardware (1 set)

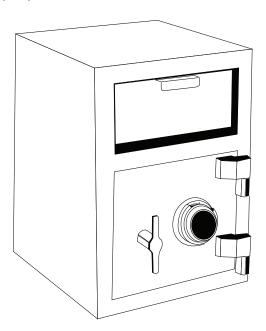

Attention: DO NOT RETURN SAFE TO STORE

If you are missing parts or have difficulty operating your safe, please contact our Consumer Assistance Department by telephone. Store will not accept returned products without prior authorization. You must first contact our Consumer Assistance Department (See page 5 for contact information).

UNLOCK & OPEN YOUR SAFE

UNLOCK AND OPEN THE SAFE

- 1. Starting with the combination dial positioned on 00 at the center index mark (Figure 1).
- 2. Turn the dial to the right passing 00 three times and stopping on the first number (Figure 2).
- 3. Turn the dial to the left passing the first number one time and stopping on the second number (Figure 3).
- 4. Turn the dial right stopping at the third number first time (Figure 4).
- 5. Rotate the handle clockwise to the right and pull the door open (Figure 5).











Combination

CLOSING AND LOCKING YOUR SAFE

TO CLOSE AND LOCK THE SAFE

- 1. Close door and Rotate the handle counter-clockwise to the left (Figure 1 and Figure 2).
- 2. Then turn the dial to right at least 4 times to secure lock (Figure 3).







Figure 1

Figure 2

Figure 3

ANCHORING YOUR SAFE

You may bolt your safe to the floor for added theft protection and resistance to tipping. Your safe has (4) pre-drilled bolt-down holes in the floor panel. Mounting hardware is provided for securing to concrete or wood surfaces. If bolting to metal surfaces additional hardware will be needed. Check with your local home center.

To secure your safe to a concrete surface:

- 1. Select a suitable and convenient location for your safe.
- 2. Empty the safe and remove the floor mat.
- 3. Locate the pre-drilled holes on the inside of safe.
- 4. Place your safe in the desired location (Figure 1).
- Line up the pre-drilled holes and mark the floor through the holes then move the safe aside.

Note: Only 2 of the four holes is needed for mounting purposes. You may choose either one of the front holes and then use the rear hole in the diagonal position (See Figure 2 example).

 


Figure 1

- 6. Using a 1/2 inch (12mm) drill bit, drill a hole at each of the 2 marks approximately 3 inches in depth then remove any excess dust (Figure 3).
- 7. Place the (2) inserts into the drilled holes and tap gently with hammer until flush with floor (Figure 4).

For wood surfaces skip steps 6 & 7:

If mounting to a wood surface, you will drill the 2 marks you made using a 11/32 inch (10mm) drill bit to bit to make 2 pilot holes and the inserts will **not** be required (Figure 3).

- 8. Place the safe back over the holes and secure in place using the (2) lag screws that are provided and then tighten with a 1/2 inch socket wrench (Figure 5).
- Once completed, replace the floor mat and close the safe door. Then rotate handle counterclockwise to the left then turn dial at least 4 times to secure lock.

 


Figure 2



Figure 3







Figure 5

Note: Bolting/unbolting of the unit is at the consumer's expense and discretion. LH Licensed Products is not responsible for any costs incurred if the unit is to be replaced.

 
If you have any questions about mounting the safe, please check with your local home center, hardware retailer or independent contractor.

USING THE DEPOSITORY DOOR

This depository style safe provides a quick option to collect and secure many items without having to open the safe door. To use the depository door follow the steps below.

- 1. Locate and pull down on the depository door handle (Figure 1 and Figure 2).
- 2. Once open, place the item you would like to deposit onto the drawer (Figure 3).
- 3. Lift the depository door upward to the closed position and the contents will drop down to the lower section of the safe (Figure 4).









Figure

Note: If using the depository safe for items other than cash / checks, it is recommended that fragile or heavy items not be deposited as illustrated above to prevent damage. These items should be placed in the safe using the door.

CARE AND MAINTENANCE

When properly maintained, your safe will continue to operate for many years. In order to ensure optimum performance of your safe, please follow these simple precautions:

CLEAN SAFE – To clean the surface of your safe, it is recommended that you use a mild cleaner (e.g., window cleaner) to avoid scratching or discoloring the surface. Always wipe dry and NEVER use abrasive cleansers on the safe or digital keypad.

For future reference, store this Operation and Installation Guide in a secure area away from the safe. DO NOT DISCARD!

CONSUMER ASSISTANCE

EMAIL: LHLPCustomerService@LHLPinc.com

WEBSITE: www.honeywellsafes.com

ADDRESS: Consumer Assistance Dept.

LH Licensed Products, Inc., 860 East Sandhill Avenue Carson, CA 90746 USA

TELEPHONE: US/Canada 1-877-354-5457 (Toll Free)

Mexico 01-800-288-2872 After English voice recording stops you must then enter 800-860-1677 to complete your call. (Toll Free)

Australia 0011-800-5325-7000 (Toll Free)

Germany/New Zealand 00-800-5325-7000 (Toll Free)

Other Countries XX*-310-323-5722 (Toll Charges Apply) XX*- Dial U.S. Country Code first

CALL CENTER HOURS: US/Canada 7am – 5pm (PST**) Mon – Fri (Subject to change) CALL BACK HOURS: Other Countries 7am – 8pm (PST**) Mon – Fri (Subject to change) PST**- Local time in Los Angeles, CA, USA

INTERNATIONAL CALL BACK HOURS:

If you need to speak with a consumer assistant and cannot contact us during the Call Center hours above, please send an email or leave a telephone message, including your Name, Telephone Number and the best time for us to contact you during the Call Back hours above and we will make every effort to contact you and help answer any of your questions or concerns.

^{*} Insert correct Country Code

^{**} Local Time based on Los Angeles California USA

RECOVERING LOST COMBINATION

The following information is required to obtain the safes combination:

- 1. PROOF OF OWNERSHIP (1 of 2 Options Below)
 - A) SALES RECEIPT & IDENTIFICATION INTERNATIONAL ORDERS ONLY!
 - Copy of sales receipt showing Store, Date & Product Description.
 - Copy of your picture I.D. (Drivers license, passport, regular I.D.).
 - B) PRODUCT OWNERSHIP VERIFICATION FORM

If sales receipt is not available, contact us by email or telephone to request a "Product Ownership Verification Form".

2. ORDER INFORMATION

CONTACT

- Name & Shipping Address
- E-mail address (If Available)
- Telephone Number
- Best Time to Contact You

PRODUCT

- Safe Model #
- Safe Serial #

3. PLACING AN ORDER

• To begin the order process, contact us by telephone, email, or mail

4. METHOD OF PAYMENT

• Visa, MasterCard, Check or Money Order

NOTE: For pricing please contact Consumer Assistance. Contact information is located on the back cover of this manual. Payment method and pricing subject to change.

SAFE IDENTIFICATION RECORD

Model Number 5	5911		
Serial Number:			

NOTES

Limited Warranty

LH Licensed Products, Inc., ("LHLP, Inc.") warrants that for a period of seven (7) years from the date of purchase, this product will be free from structural or mechanical defects resulting from materials or workmanship. LHLP, Inc., at its sole option and as the purchaser's sole remedy under this warranty, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement or repair will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value.

THIS IS YOUR EXCLUSIVE WARRANTY.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

This warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. You must keep the original sales receipt. Proof of purchase is required to obtain warranty service.

LHLP, Inc. dealers, service centers, or retail stores selling this product do not have the right to alter, modify or in any way change the terms and conditions of this warranty.

This warranty does not apply to the finish on the product. This warranty does not cover normal wear and tear of parts or damage resulting from any of the following: negligent use or misuse of the product, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than LHLP, Inc. or an authorized service center, improper installation, or exposure to extremes of heat or humidity. Further, the warranty does not cover Acts of God, such as fire, flood, earthquakes, hurricanes and tornadoes.

LHLP, Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty or otherwise relating to the sale of this product. LHLP, Inc. is also not responsible for: costs associated with removing or installing the product; damage or loss of the contents of the product; nor for the unauthorized removal of the contents; or damages incurred during shipment.

THE ABOVE WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, AND LHLP, INC. DISCLAIMS ANY AND ALL OTHER COVENANTS AND WARRANTIES.

Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty period. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state, or province to province, or jurisdiction to jurisdiction.



The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product.

M5911E-20160311 www.honeywellsafes.com