


Honeywell

52 Bottle Wine Cooler User Manual

Read and save these instructions before use

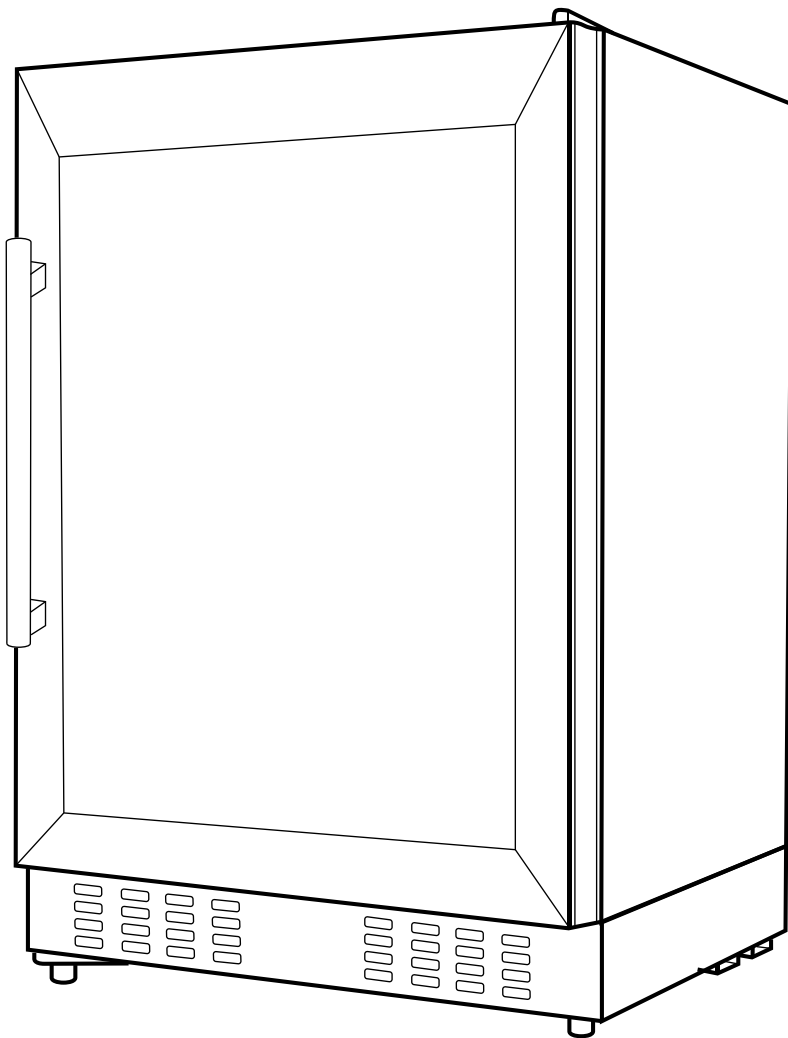

Models: H52WCSC

CONTENTS

1 Safety Warnings

1.1 Warning	1-2
1.2 Electricity related warnings	3
1.4 Related warnings for use	4
1.5 Warnings related to placing items	4
1.6 Warnings for energy	5
1.7 Warnings related to disposal	5

2 Proper Use of Beverage Cooler

2.1 Names of components	6
2.2 Display control	6-8
2.3 Placement	9
2.4 Start to use	9
2.5 Handle installation	10
2.6 Reversing the door swing	11-15
2.7 The arrangement of bottle	15

3 Maintenance of Beverage Cooler

3.1 Disconnecting	16
3.2 Stop using	16
3.3 Cleaning	16

4 Troubleshooting

17

DEAR CUSTOMER:

Thank you for buying this beverage cooler. To ensure that you get the best results from your new beverage cooler, please take time to read through the simple instructions in this booklet. Please ensure that the packing material is disposed of in accordance with the current environmental requirements. When disposing of any beverage cooler equipment please contact your local waste disposal department for advice on safe disposal. This appliance must be only used for its intended purpose.

1 SAFETY WARNINGS

1.1 Warning



WARNING: risk of fire / flammable materials

This appliance is intended to be used in household, non-retail applications.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The appliance has to be unplugged after use and before carrying out user maintenance.

DO NOT store explosive substances such as aerosol cans in this appliance.

DO NOT use extension cords or ungrounded (two prong) adapters.

WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

WARNING: Do not damage the refrigerant circuit.

WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are the type recommended by the manufacturer.

WARNING: This cooler uses flammable blowing gas and refrigerant. Please dispose of according to local regulators.

WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.

WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

DANGER: Risk of child entrapment. Before disposing your old cooler or cooler:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.

The cooler must be disconnected from the source of electrical supply before attempting the installation of accessory.

Refrigerant and cyclopentane foaming material used for the appliance are flammable. To prevent damage to the environment or any other harm, when the appliance is scrapped, it shall be kept away from any fire source and be recovered by a recovering company with corresponding qualification.

For EN standard: This appliance can be used by children aged from 8 years and above and persons with reduced physical sensory or mental capabilities if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged 3 to 8 are allowed to load and unload refrigerating appliances.

WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.

1.3 Electricity Related Warnings

- Do not pull the power cord when pulling the power plug of the beverage cooler. Please firmly grasp the plug and pull it out from the socket directly.
- Do not damage the power cord under any condition, do not use when the power cord is damaged or the plug is worn.
- Worn or damaged power cord should be replaced in manufacturer-authorized maintenance stations.
- The power plug should be firmly contacted with the socket or else a fire might be caused. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.
- Please turn off the valve of the leaking gas and then open the doors and windows in case of leakage of gas and other flammable gases. Do not unplug the cooler and other electrical appliances considering that spark may cause a fire.
- To ensure safety, it is not recommended that to place regulators, rice cookers, microwave ovens and other appliances on the top of the beverage cooler, those recommended by the manufacturer are not included. Do not use electrical appliances in the food pantry.

1.4 Related Warnings for Use

- Do not arbitrarily disassemble or reconstruct the beverage cooler, nor damage the refrigerant circuit; maintenance of the appliance must be conducted by a specialist.
- Damaged power cord must be replaced by the manufacturer, its maintenance department or related professionals in order to avoid danger.
- The gaps between cooler door and cooler body are small, be noted not to put your hand in these areas to prevent from squeezing the finger. Please be gentle when closing or opening the cooler door to avoid falling articles.
- Do not give package and other components to children to play. The bending board and plastic film may cause suffocation. Do not allow children to enter or climb the cooler to prevent that children are sealed in the cooler or children are injured by the falling cooler.
- Do not spray or wash the cooler; do not put the cooler in moist places easy to be splashed with water so as not to affect the electrical insulation properties of the cooler.
- Do not use cooler body, cooler door, etc. as pedal or support.
- Do not place heavy objects on the top of the cooler considering that objects may fall when opening or closing the door, and accidental injuries might be caused.
- Please pull out the plug in case of power failure or cleaning. Do not connect the cooler to power supply within five minutes to prevent damages to the compressor due to successive starts.

1.5 Warnings Related to Placing tems

- Do not put flammable, explosive, volatile and highly corrosive items in the upright cooler to prevent damages to the product or fire accidents.
- Do not place flammable items near the cooler to avoid fires
- This product is for household refrigeration appliances, mainly used in the storage of beverages. According to national standards, household refrigeration appliances shall not be used for other purposes, such as storage of blood, drugs or biological products.

1.6 Warnings for Energy

- 01** Beverage cooler might not operate consistently when sited for an extended period of time below the cold end of the range of temperatures for which the cooler appliance is designed.
- 02** The need to not exceed the storage time(s) recommended by the beverage manufacturers for any kind of beverage.
- 03** The precautions necessary to prevent an undue rise in the temperature of the beverage while defrosting the beverage cooler.
- 04** The fact that a rise in temperature of the beverage during manual defrosting, maintenance or cleaning could shorten the storage life.
- 05** The necessity that, for doors or lids fitted with locks and keys, the keys be kept out of the reach of children and not in the vicinity of the cooler appliance, in order to prevent children from being locked inside.

1.7 Warnings Related to Disposal

Refrigerant and cyclopentane foaming material used for the beverage cooler are flammable. Therefore, when the beverage cooler is scrapped, it shall be kept away from any fire source and be recovered by a recovering company with corresponding qualification other than be disposed of by combustion, so as to prevent damage to the environment or any other harm.

When the beverage cooler is scrapped, disassemble the doors, and remove gasket of door and shelves; put the doors and shelves in a proper place, so as to prevent trapping of any child.


Correct Disposal of this product:




This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

2 PROPER USE OF BEVERAGE COOLER

2.1 Names of Components

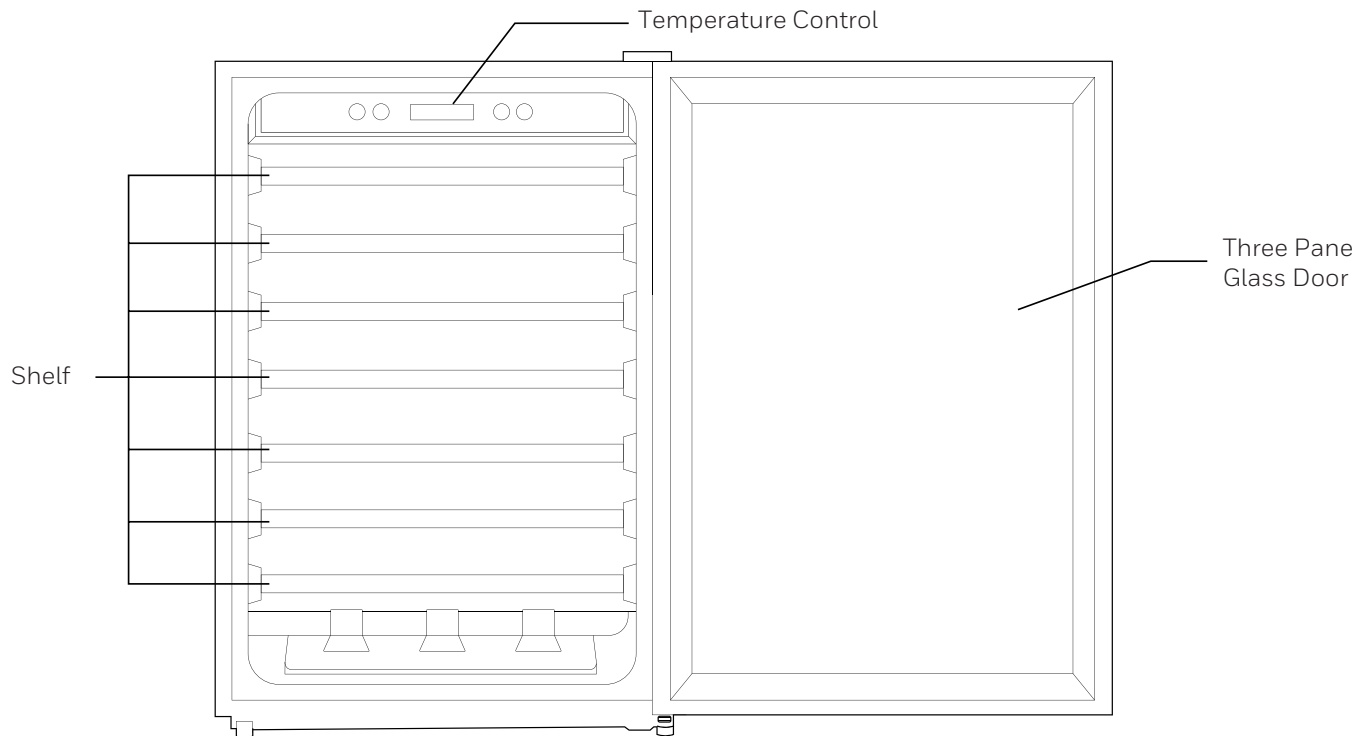

2.2 Display Control

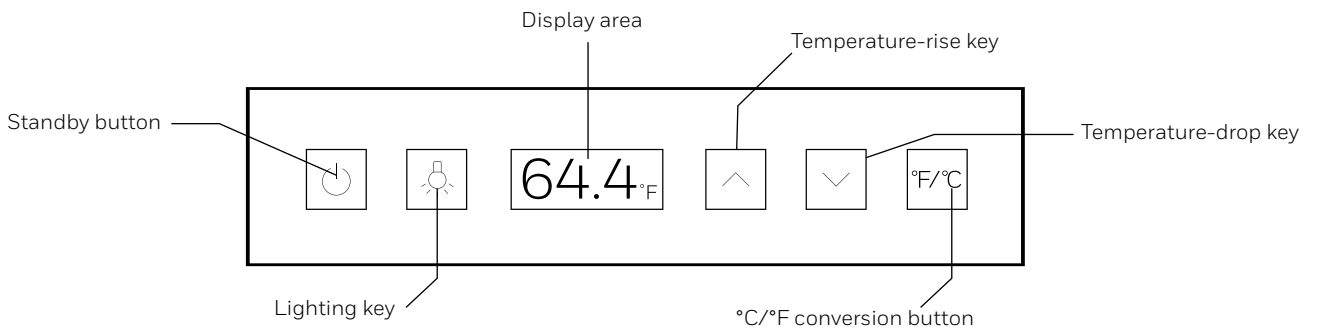

When powering on the cooler for the first time, the display screen will display in full for 3 seconds and the start-up tone will ring, and then the display will enter a normal running state.



Avoid scratching the display panel with sharp objects and keep it away from high magnetic fields and high humidity. Otherwise, normal settings and operation of the cooler may be affected.

Standby Function

Press the standby button for 5s to enter/exit the standby mode. The standby mode will be valid after locking.

Lighting

Press the lighting button to turn on or off the light and the buzzer will sound once. The light is on when the door is opened and off when the door is closed. Press this button to turn off or on the light when the door is open. The ON state of the light is not affected by the door opening and closing.

°C/°F Conversion Button

Press the °C/°F conversion button to switch between Celsius and Fahrenheit temperature. In this case, the display area will display the Celsius or Fahrenheit temperature setting of the existing mode.

Temperature Setting

Once the temperature increase button is pressed, the temperature will increase by one degree (°C/°F). Once the temperature decrease button is pressed, the temperature will decrease by one degree (°C/°F).



- Setting range of the Celsius temperature: 1 °C - 10 °C.
- Setting range of the Fahrenheit temperature: 33.8°F - 50 °F.

Memory Function

The beverage cooler has a power-off memory function. If the power supply is reconnected, the beverage cooler will run under the temperature set before it powered off.

Error Code

If the following error codes appear on the LED display, please unplug the unit for 24 hours to allow the sensors to completely defrost a restart. If there is still an error when turning the unit back on, please contact the manufacturer.

Error Code	Description
E1	Fault of temperature sensor
E4	Fault of defrost temperature sensor
E6	Communication fault
E9	High temperature alarm

2.3 Placement


- Before using the cooler, remove all packaging materials including bottom cushions, foam pads and tape inside, tear off the protective film on the door and the upright cooler body.
- The cooler should be placed in a well-ventilated indoor place on ground that is flat and sturdy. (Rotate left or right to adjust the wheel for leveling, if unstable)
- Keep away from heat and avoid direct sunlight. Do not place the upright cooler in moist or watery places to prevent rust or reduction of insulation.
- Please leave at least 30 cm of space above the upright cooler, and 10 cm from both sides and backside to facilitate heat dissipation.

2.4 Start to Use


- The cooler must stand upright for half an hour before connecting power when it is first started.
- Clean the interior before using for the first time.
- Do not connect the cooler to electronic energy saving plugs and converters that can convert DC into AC (e.g.: solar energy system, ship grid).
- When the compressor is running, there may be water drops or frost on the backside of the cooler. Wiping out frost or water drops is not needed as the water will be collected into drain tank, then inflow into water disposal pan above the compressor and vaporized.

2.5 Handle Installation

01 Put the handle on the glass door through the two bolts.

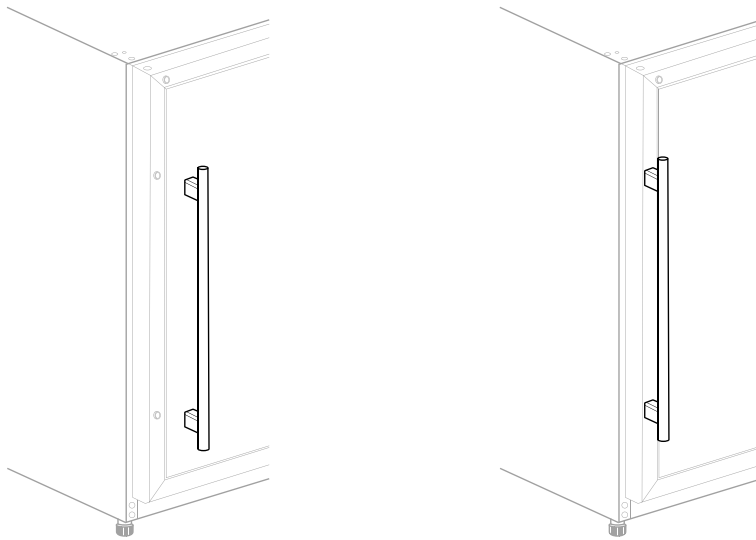


02 Use the allen wrench to fix the handle, making sure the screw hole is downward.

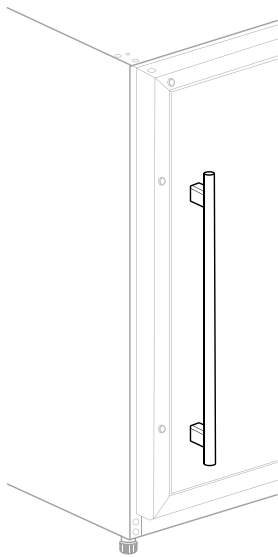


2.6 Reversing the Door Swing


01 Remove the right upper hinge shaft and door.

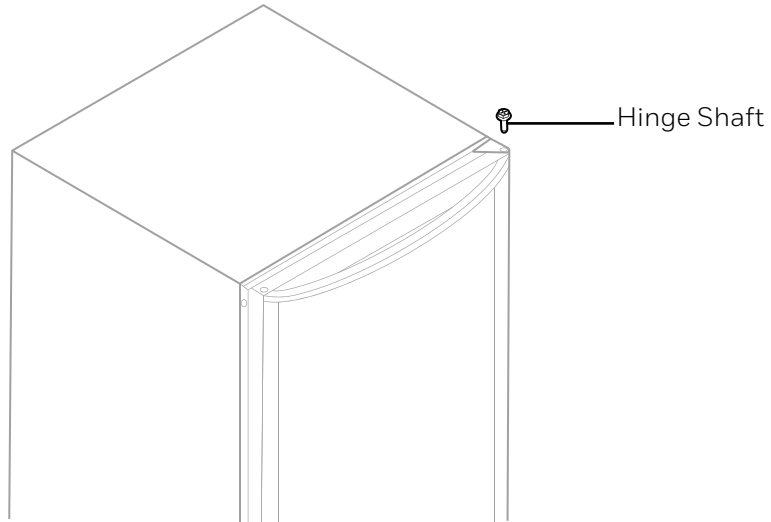


02 Remove 3 screws from the upper hinge on the right side then remove the upper hinge. Remove 3 plastic caps on the left side. From the air cover, remove screws and the sleeve. Then remove the air cover. Remove the door support, and remove 3 screws from the lower hinge. Remove the lower hinge and the lower hinge shaft.

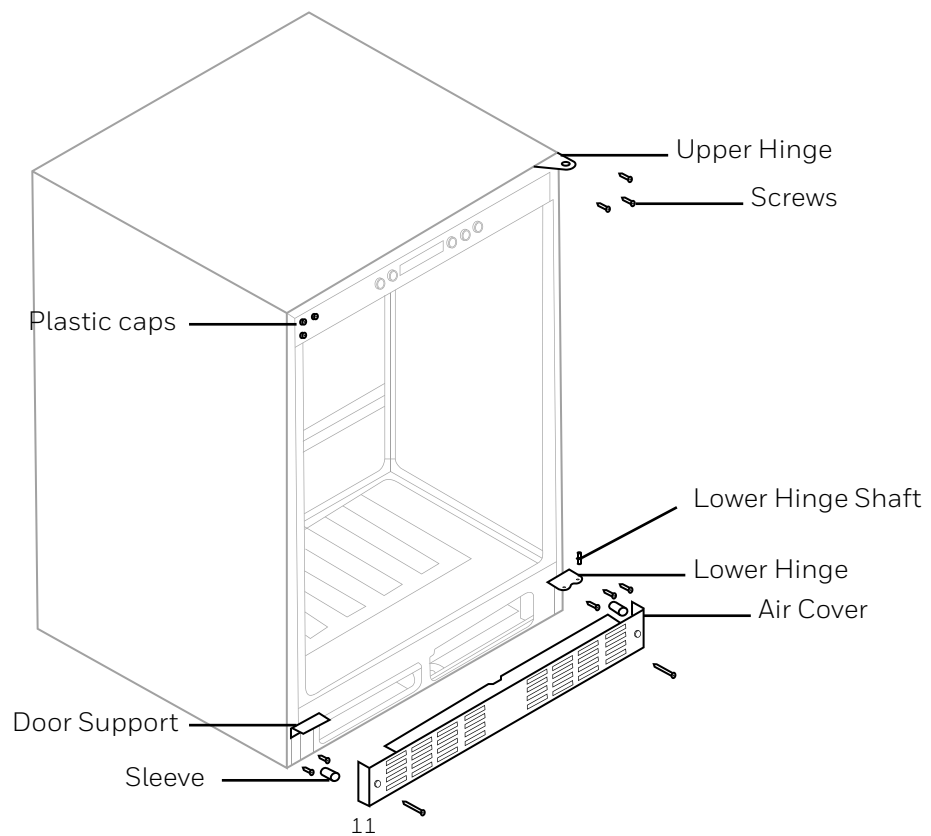



03 Take out the left upper hinge, and secure it on the left upper corner with a screw. Install the hole caps onto the right upper corner. Remove the lower hinge shaft and install it into the hole on the left side. Then secure the lower hinge onto the left lower corner with a screw. Install the door support onto the right lower corner with a screw. Then, install the air cover by using a screw and a sleeve on the lower side of the cabinet.

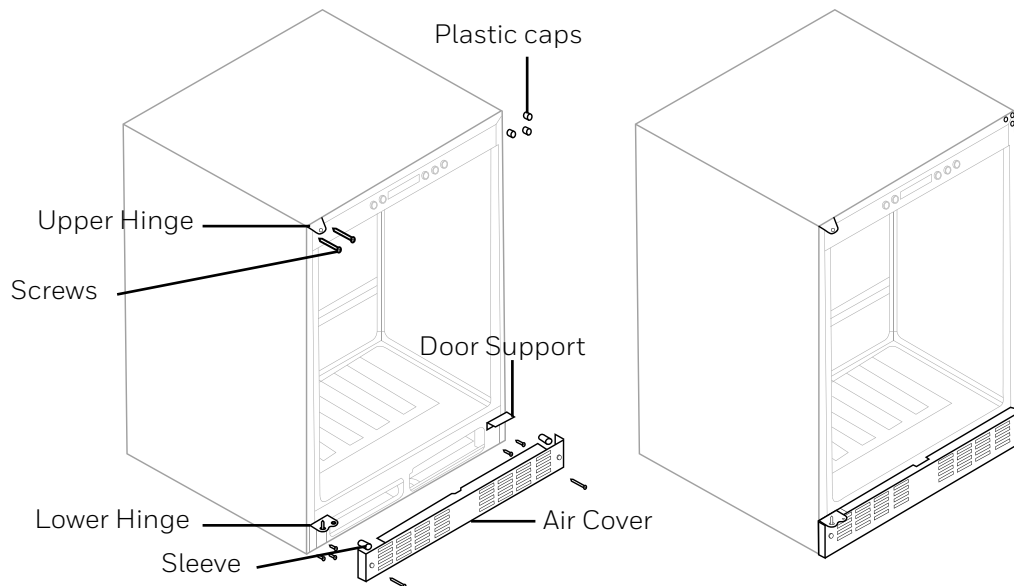

04 Remove the sleeve and the hole cap of the door, and change their positions. Remove the door stopper, screw and lower shaft sleeve, and then install them into the left lower corner of the door.

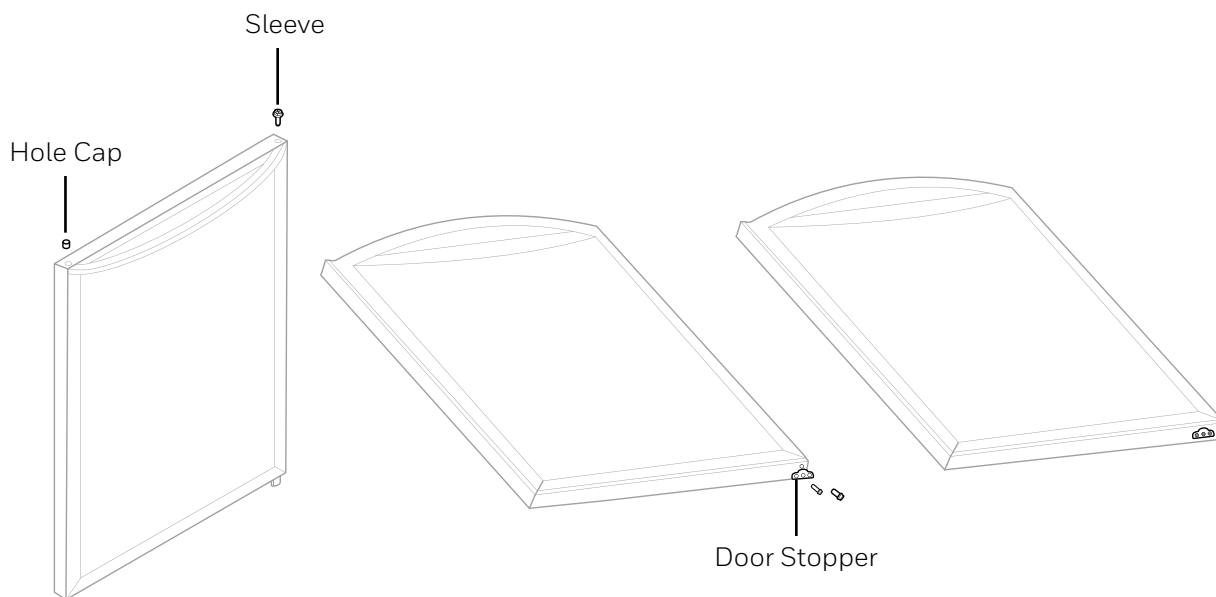


05 Install the door, and fix the upper hinge shaft.

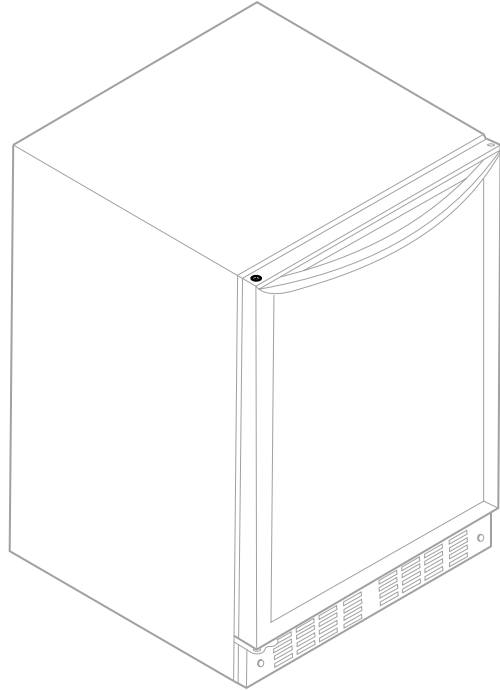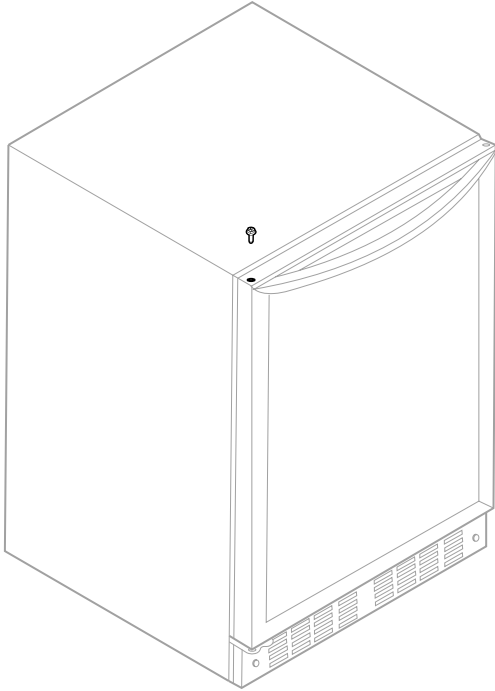


2.7 Reversing the Door Swing – Longitudinal Handle


01 Remove the shaft hole cap and the sleeve of the upper part of the glass door assembly. Remove the screws, the door light switch block, the door stopper and screws, and the sleeve of the lower part of the assembly.

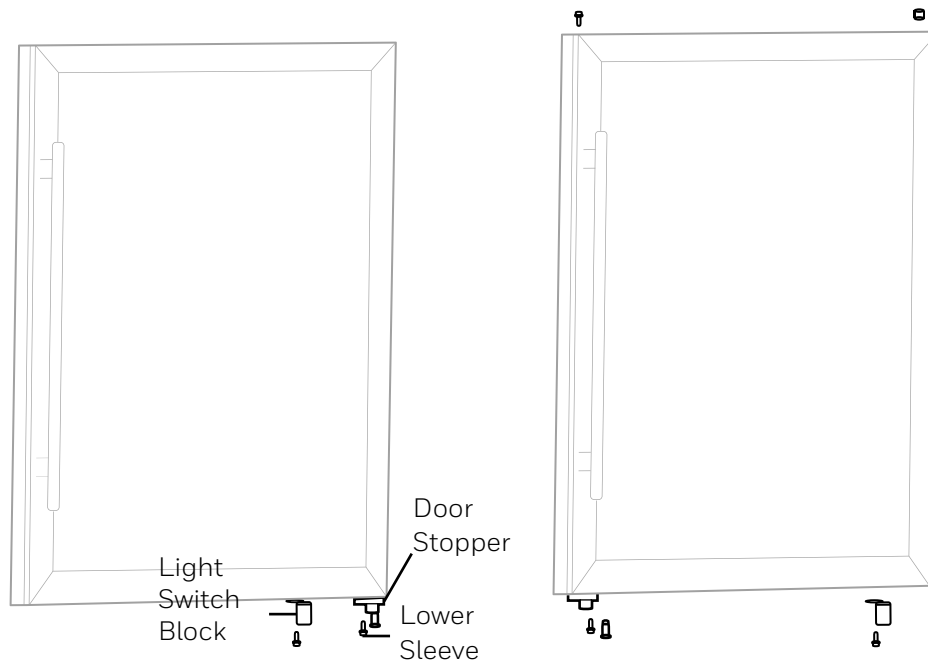

02 Rotate the door assembly 180 degrees, exchange the position of the upper sleeve and the shaft plug, then move the door stopper and the lower sleeve from the lower right to the lower left.

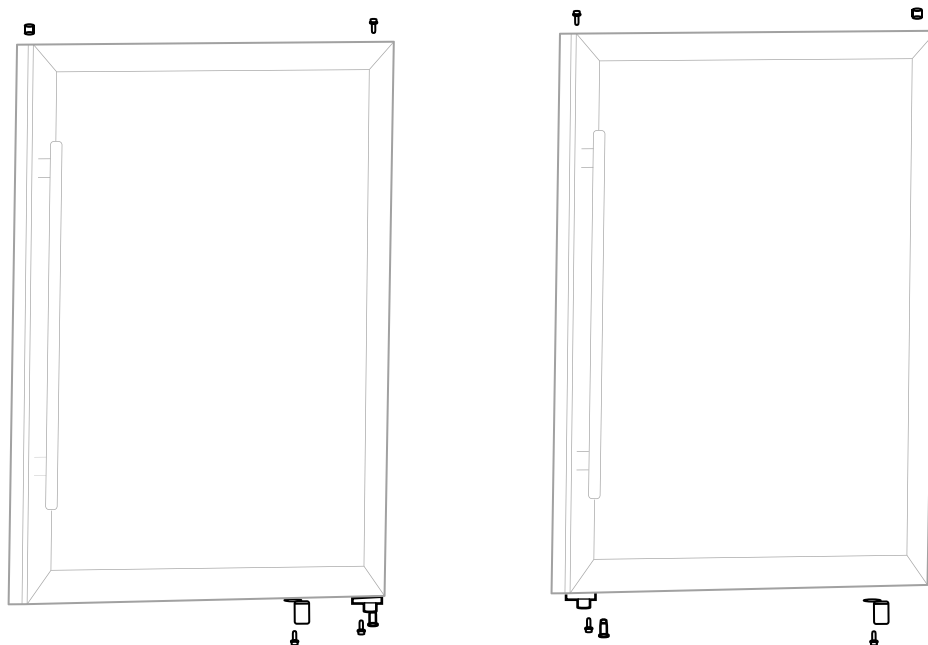

03 Assemble the sleeves, the shaft hole cap, the stopper and the switch block.

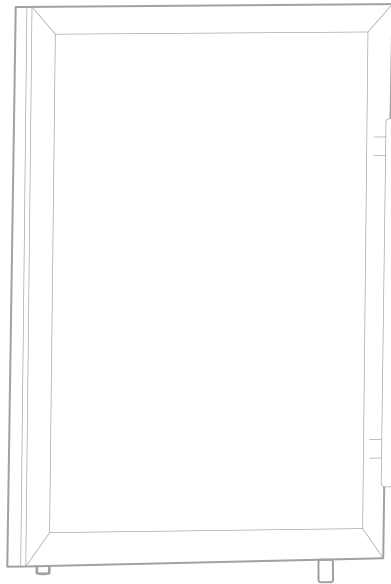

04 Install the door on the cabinet.

2.7 The Arrangement of Bottle

- Do not let the bottles touch the back side of the cooler in order to maintain proper air circulation within the cooler.
- The capacity for bottle storage within the wine cabinet is based upon the following marked bottle size. Oversized bottles may impact the number of bottles that can be stored inside the beverage cabinet.



3 MAINTENANCE OF BEVERAGE COOLER

3.1 Disconnect the cooler

Unplug the power plug to disconnect the cooler.

3.2 Stop using the cooler

- If the cooler is left unused for a long time please:
- Unplug the cooler.
- Clean the cooler.
- Keep the cooler door open.

3.3 Cleaning

- Clean dust behind the cooler and on the ground to improve the cooling effect and energy saving.
- Check the door gasket regularly to make sure there is no debris. Clean the door gasket with a soft cloth dampened with soapy water or diluted detergent.
- Clean the interior of the upright cooler regularly to avoid odor.
- Please turn off the power before cleaning interior, remove all food, shelves, drawers, etc.
- Use a soft cloth or sponge to clean the inside of the upright cooler, with two tablespoons of baking soda and a quart of warm water. Then rinse with water and wipe clean. After cleaning, open the door and let it dry naturally before turning on the power.
- For areas that are difficult to clean (such as narrow gaps or corners), it is recommended to wipe them regularly with a soft rag, soft brush, etc. to ensure no contaminants or bacteria accumulate in these areas.
- Do not use soap, detergent, scrub powder, spray cleaner, etc., as these may cause odors in the interior of the upright cooler or contaminate food.
- Clean the bottle frame, shelves and drawers with a soft cloth dampened with soapy water or diluted detergent. Dry with a soft cloth or dry naturally.
- The wooden wine rack should be cleaned with a dry cloth. The rack should not be directly immersed in liquid to prevent cracking or mold from moisture.
- Wipe the outer surface of the upright cooler with a soft cloth dampened with soapy water, detergent, etc., and then wipe dry.
- Do not use hard brushes, clean steel balls, wire brushes, abrasives (such as toothpastes), organic solvents (such as alcohol, acetone, banana oil, etc.), boiling water, acid or alkaline items, which may damage the cooler surface and interior. Boiling water and organic solvents such as benzene may deform or damage plastic parts.
- Do not rinse directly with water or other liquids during cleaning to avoid short circuits or damage to the electrical insulation.



Do not use detergent and solvent with sand or acid.



Please unplug the upright cooler for defrost and cleaning.

4 TROUBLESHOOTING

Inoperation	<p>Ensure the cooler is plugged in and connected to power</p> <p>Check that the voltage is not low</p> <p>Check whether there is a power failure or partial circuits have tripped.</p>
Long-term operation of compressor	<p>Do not overload the coolers</p> <p>Do not open the doors too frequently</p> <p>Note that it is normal that the cooler operates for a longer time in summer when the ambient temperature is higher</p>
Light is out	<p>Check whether the cooler is connected to power supply and whether the indicator light is damaged.</p>
Loud noises	<p>Ensure that the cooler is sitting on a flat and stable surface</p> <p>Ensure that the cooler accessories are properly placed</p>
Cooler enclosure heat condensation	<p>The cooler enclosure may emit heat during operation, especially in summer, caused by the radiation of the condenser; this is normal.</p> <p>Condensation may be detected on the exterior surface and door seals of the upright cooler when humidity is high; this is normal.</p>
Airflow sound (Buzz / Clatter)	<p>The compressor may cause a buzzing sound when starting up or shutting down.</p> <p>The solenoid valve or electric switch valve may create a clattering sound which is normal and does not affect the operation.</p>

If you want to return or replace the product, please contact the store where it was purchased (remember to bring the purchase invoice). If your product needs repair, please contact us via email or phone.

BHRS Group, LLC

585 Prospect St.
Lakewood, NJ 08701

Customer Service Tel: 1-800-604-0295
Customer Service Email: support@honeywellcoolingappliances.com
Website: honeywellcoolingappliances.com

©2021 BHRS Group, LLC. All Rights Reserved.

The Honeywell Trademark is used under license from Honeywell International Inc. Honeywell International Inc. makes no representations or warranties with respect to this product. This product is manufactured by BHRS Group, LLC.

MADE IN CHINA

Honeywell